

Operating Manual (Translation)

Studio Star Roller Shutter



	<p>This operating manual contains important safety instructions. For the safety of people it is important to follow these instructions. Please save these instructions.</p>
--	---

Schanz Rollladensysteme GmbH





Forchenbusch 9
D- 72226 Simmersfeld
Phone. +49 (0)7484/9291-0
Fax: +49 (0)7484/ 9291-36
Internet: www.rollladen.de

Commission No.	Date Installation and Instruction	Signature

1. Content


1.	Content	2
2.	Symbol explanation	2
3.	Design and Description of Schanz Roller Shutter Systems	3
4.	Correct use.....	3
5.	Transport / Packaging / Unpacking.....	4
6.	Assembling / Installation / Working on the facade.....	4
7.	Connecting the shutter	4
8.	Operation	5
9.	Cleaning.....	7
10.	Inspection/ Fault clearance/ Maintenance/ Repair	7
11.	Technical Data – Range.....	8
12.	Disposal.....	9
13.	Product surveillance.....	9
14.	CE- Conformity	9
15.	Warranty	9
16.	Customer Service/ Manufacturer	10
17.	Copyright/ References to this documentation	10
18.	Included Documents	10
19.	Table Wind Resistance Classes.....	11
	EC Declaration of Conformity	12

2. Symbol explanation

	<p>Imminent danger for body, life and property. A failure to observe these warnings may have noxious effects and lead to severe injuries as well as damages to furniture and properties.</p>
	<p>Important advice for the proper usage of the system. A failure to observe these warnings may damage furniture and properties and contains the risk of injury.</p>
	<p>Warning against electric energy. A failure to observe these warnings may have noxious effects and lead to severe injuries through electric energy as well as damages to furniture and properties.</p>
	<p>Reference to enclosed documents, useful hints and practical information. These advices contain information for a better handling.</p>

3. Design and Description of Schanz Roller Shutter Systems

The Schanz Roller Shutter System offers 12 basic models which can be combined as a system.

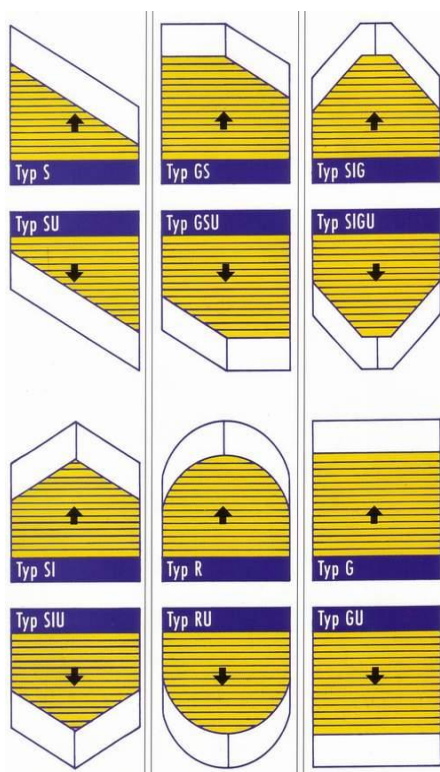

Basically the roller shutter is being shut from bottom to top and the roller shutter housing is being fixed to the bottom of the window, generally to the windowsill.

For the installation as a hanging system with a closing direction from top to bottom the roller shutter types with an additional U have to be used. Depending on the installation position (hanging or standing on the windowsill) modifications of the drive are necessary.



Do never change the installation position of the roller shutter!

A change of the installation position which is not verified through us can lead to malfunction and danger

For the basic model S the tension cord is running hidden through the guides. For all the other models and model combinations the tension cord is visible due to functional relevance. The end slat is functionally not entirely running in the roller shutter jacket.

The roller shutter jacket can be slightly angular to the shutter box if the construction is not centred. This is not affecting the functionality at all.

The Schanz roller shutters are made of high quality aluminium and therefore provide a long durability and resistance in the rough every day usage. According to your wishes and needs the surfaces can be anodized, powder-coated or varnished.

Schanz roller shutters are being delivered with an electric drive and control unit or with a manual handwheeldrive.

The electric drive with the control unit provides a high level of ease of use and a torque regulation of the drive which automatically cuts off the drive at a pre-set value, for example if the shutter is blocked by objects.

The handwheeldrive allows you for the manual version of the shutter an easy and effortless operation.

4. Correct use

Schanz roller shutters of the type **Studio Star** are sun protection devices for the vertical installation in front of windows and they serve as light protection, visual cover and weather protection. Any rebuilding or misuse is not allowed.

The roller shutter must only be used within the technical limit (also see technical data). Therefore the usual climatical and topographical conditions (temperature range, wind load zone, wind resistance class, any expected pollution through dust, greenery etc., any aggressive media e.g sea air, torrential rain etc.) at the installation site have to be considered by the operator/ customer.

Installation, disassembling, maintenance and repair work must only be done by qualified people of Schanz Rolladensysteme GmbH or through authorised people by Schanz Rolladensysteme GmbH.

For usage under certain circumstances e.g. for usage in nurseries or institutes for disabled it may be necessary to implement specific actions (definition of the installation height of the control units, additional safety measures etc.) by Schanz Rolladensysteme GmbH or by specifically authorised people.

Further requirements for a correct usage are:

- The compliance with the information given, in particular the instructions for safety and accident prevention stated in this operating manual and any additional documents provided for the components, e.g. the control units.
- The compliance with the guidelines as stated in section "technical data"
- An appropriate operation of the roller shutter
- A professional maintenance and inspection in a timely manner

Any other or further use is considered as not being correct and is at the own risk of the operator.



For any emerged damage resulting of incorrect use Schanz Rolladensysteme GmbH or their specifically authorised people declines any liability and warranty.

5. Transport / Packaging / Unpacking

Depending on the route of transport and the expected conditions the roller shutter will be packed and the roller shutter jacket will be fixed in the roller shutter box.

Depending on the type and size of the roller shutters they might be so heavy that a suitable load-carrying equipment and lifting tool has to be utilized.

Only use sufficiently dimensioned, safe and correctly fixated load-carrying equipment and lifting tools and avoid damages and injuries.

Check immediately if the product has been delivered without damage. Immediately complain about damaged roller shutters.

Removing the transportation safety devices:

- Unscrew and open the cover of the roller shutter box
- Remove the foam sheets
- Remove the 4 slats which are connected to the jacket
- Put back the cover and screw it back

6. Assembling / Installation / Working on the facade

Each roller shutter is individually manufactured according to your window shape and size and must only be installed by Schanz Rolladensysteme GmbH or specifically authorised people.



The installation of the roller shutter has to be conducted following the information given in the assembly and safety instructions.

The installation of the roller shutters should only be conducted on ready-made rainproof facades!

The plastering of the roller shutter could lead to severe damages due to damp and furthermore make essential reparation difficult or even impossible.



The water drain holes on the bottom of the roller shutter box have to be clear at all times so that ingressed water can drain off!

The roller shutter has to be fixed sufficiently and safe attuned to the ground!

7. Connecting the shutter

Our technicians are in principle not authorised to connect any electrical devices to the in-house network. The connection has to be completed by a licensed electrical company.






 


The electrical connection of the roller shutter and the control unit must only be completed by skilled electricians in compliance with the enclosed connecting diagram and the national and international legal regulations, e.g. DIN EN 60335-1 (VDE 0700-1), DIN EN 60335-2-97, DIN EN 60204-1 (VDE 0113-1) etc. Furthermore the regulations of the local electric utility, the Employer's Liability Insurance Association and the Accident Prevention Regulation have to be strictly followed.


The roller shutter and the control unit can only be connected to an in-house network which is equipped with a ground fault circuit interrupter.

8. Operation

General operation and safety instructions

	<p>Mind the following instructions! Instruct all persons who might operate with the roller shutter</p>	
<p>Children Risk of injuries caused by the roller shutter</p>		<p>Keep children away from the roller shutter and its operation elements. Also in a retracted position of the shutter there is the risk of injury on the inlet of the roller shutter box and on the slats Let children not play with the operation elements, e.g. the switch of the control unit or the wireless control and shut those away.</p>
<p>Traversing range of the roller shutter</p>		<p>Always keep the traversing range of the roller shutter clear. Never put your hand into the moving zone if it is not secured that the roller shutter does not run up. If necessary switch off the self-winding and make sure that another person can not activate the control. There is the risk of injury!</p>
<p>Operation during wind and storm</p>		<p>Close the window and the shutter so that there is no low-pressure emerging between window and shutter. In case of an open window the hangings could be pulled out off the guide rails. Only if the window is closed and the roller shutter is completely shut down the shutter resists the wind and storm according to the stated wind resistance classes.</p>
<p>Operation during heat</p>		<p>Schanz roller shutter stand out for their resistance and full functionality also during strong heat. During extreme temperatures we recommend not to shut the shutter completely so that rear ventilation can be achieved and the risk of deformation and malfunction is being avoided.</p>
<p>Operation during winter and cold</p>		<p>During frost there is the risk that the roller shutter could freeze on. In this case please avoid using the roller shutter and if necessary switch off an existing automatic control unit. The integrated torque regulation does not offer sufficient protection for the slat hinge. Manual Operation should be done carefully. In case of resistance, stop immediately, Do not force hinges to open or close. Any forcible operation could lead to damages and malfunction.</p>
<p>Misuse</p>		<p>Never push the roller shutter up or down! Never block the moving zone of the roller shutter! Never load the roller shutter with any additional weight! There is a risk of damage and malfunction!</p>
<p>Strong pollution Water inside the roller shutter box</p>		<p>Through strong pollution, greenery etc. the mechanical elements in the roller shutter box could be blocked as well as the water drain holes on the bottom of the roller shutter box. Furthermore the pollution reduces the life cycle of your roller shutter. Water entering the roller shutter box is normal and not a default. Therefore please check through a sight check regularly if the water drain holes are clear, in particular after strong fall of leaves, pollution or strong rain. The inserted tubular drives are according to IP44 water proof and should never be set under water! There is the risk of danger through electricity!</p>
<p>Disengage the shutter movement in an emergency</p>		<p>Should the water drain holes not be clear disconnect the roller shutter from power. Open the roller shutter case and clear the water drain holes with an appropriate tool so that any ingressed water can drain off. Never put your hands in the roller shutter box. There is the risk of injury! If the roller shutter box is dry inside we recommend to vacuum-clean it regularly.</p>
<p>Damage of the tension cord</p>		<p>Depending on the control unit: - OFF via key press the self-winding can be switched off - To relieve press direction key for counter movement Please read about this function in the enclosed operating manual for the control unit</p>
<p>Damage of the tension cord</p>		<p>Avoid any damage to the tension cord! Only use the roller shutter when the tension cord is immaculate! A damaged or broken tension cord should be replaced by our customer service! A wrong procedure and assembly could lead to damage and malfunction!</p>

Operation with electric motor


	<p>In terms of the operation of the electric motor a control unit has been delivered according to your convenience and requirements.</p> <p>Please catch up with the functions according to the operating manual of the control unit.</p> <p>Note the included operation and safety instructions!</p>
---	---

General information for the operation and usage of roller shutters with an electric motor:

- Design of control units/ Change of control units
Control units have to be designed and built in a safe and functionable manner and so that no dangerous situation can occur. In particular they have to be designed and built in a manner which is in accordance with the expected working stress and stands the external effects, and mistakes in the logic do not lead to dangerous situations. When choosing the control units it has to be considered that they are in accordance with the regulations EN 60335-1 and EN 60335-2-97.
The roller shutter gear and the control unit are being harmonized by Schanz Rolladensysteme GmbH so that the whole system works reliably.
If you want to change your control unit, for example if you want to replace new control units with a different functionality or any defect control units please contact our customer service.
For the automatic drive please mind the running direction of the roller shutter.
- Arrangement of the equipment
The equipment has to be positioned in a manner that the movement of the roller shutter can be watched.
From the operating switch the operator has to make sure that there are no people or objects within the moving zone of the roller shutter.
For roller shutters that can be operated out of sight the operator has to take appropriate actions to avoid any movement of the roller shutter during maintenance works, i.e. window or wall cleaning
- Cut out Switch to prevent overheating
The cut out switch to prevent overheating is to avoid that the motor overheats and catches fire, for example by operating a blocked roller shutter or a frequently repeated roller shutter movement
In case of overheating the motor switches off and can only be switched on again after a certain cooling period and if the operating switch has been put on "0" for at least 60 seconds.


Setting options for the electric motor

During the production and assembly of the roller shutter Schanz Rolladensysteme GmbH and their authorised people have angled:

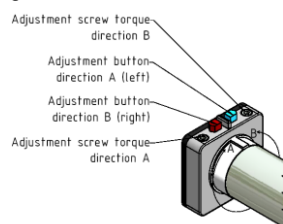

- the position of the upper and lower end position and
- the torque of the bed stop
so that no changes have to be conducted


In case your roller shutter has to be readjusted please do not do it yourself but contact our customer service.

	<p>A misapplication and wrong setting could lead to malfunction, damage and danger!</p>
---	--

Operation with the hand wheel



For a manual operation the roller shutter will be equipped upon request with a hand wheel drive with a clip supported self-locking.
Please mind the direction of rotation!

	<p>The case may not be opened under any circumstances because the clip supported self-locking of the ball gear can only be recomposed with special tools.</p> <p>In order to change the tension cord, please contact your customer service!</p>
---	---

Operation with the belt take-up reel



The belt should only be pulled smoothly and perpendicular down respectively out of the winder box. While opening, the belt should be pulled slowly in the last third. The roller shutter should not hit forcibly the top. While shutting, the belt should be controlled in the last third. Never let go the belt. The belt is automatically winding up in the belt take-up reel. Avoid any jerky operation of the belt. The collateral deflection of the belt leads to exceeding abrasion. The belt could be distorted. This could cause malfunction.

	<p>The case may not be opened under any circumstances because the clip supported self-locking of the ball gear can only be recomposed with special tools. In order to change the belt please contact your customer service!</p>
--	--

9. Cleaning

Due to the upright construction of the roller shutter with the bottom-up moving direction any contaminant (dust, greenery etc.) could enter into the roller shutter box and potentially lead to increased abrasion, operation noises or blocked water drain holes. Therefore the roller shutter box has to be checked regularly, at least once per year if there are any contaminants, and if this is the case it should be cleaned.

In areas with a higher appearance of dust an early abrasion of assembly parts could be possible. We recommend to clean the roller shutters regularly.

Cleaning of the roller shutter box – procedure:

- Disconnect the drive and secure against unwanted resetting.
- Unscrew the case of the roller shutter box and take it off.
- If the roller shutter box is dry inside you can vacuum clean it.
- If there is water inside the box clear the water drain holes with an appropriate tool, let the water drain off and let it dry before any further cleaning.
- If cleaning is not possible because of construction or accessibility please assign our customer service.
- Put back the case and screw it tight

Cleaning of the hanging:

To clean the hanging no aggressive detergents and methods should be used which could damage the shutter, its surface or the electrical components.

The drive is according to IP44 waterproof but nevertheless it has to be avoided that any water enters into the drive.

	<p>Do not use any steam-jet or high-pressure blaster, as the water could enter in the drive unit. This can lead to a lower life cycle and to danger through electric current!</p>
--	--

We recommend cleaning with gentle detergents, a soft spoon and clear water.

10. Inspection/ Fault clearance/ Maintenance/ Repair

	<p>Maintenance/ Repair work and working to the electric may only be conducted by authorised and specialised staff. In any case while working on the electric and on the shutter system it has to be disconnected from the network and secured against unwanted resetting.</p> <p>While working on the open roller shutter appropriate tools are to be used and it has to be minded that no components are being damaged. There is a risk of injury through mechanical components.</p>
--	---

Inspection

To ensure the functional capability of your roller shutter we recommend a regular inspection through our customer service. The following inspections should be done:

Component	Interval	Criteria/ Remark
Tension cord	Minimum once p.a.	In good condition; Damaged tension cord should be replaced by customer service
Belt	Minimum once p.a.	In good condition; Damaged belt should be replaced by customer service
Water drain holes	Minimum once p.a.	Water drain holes have to be clear; see under Cleaning

Fault clearance


Disorders can particular occur through foreign objects inside the roller shutter box. Please check at first if the roller shutter box has to be cleaned (→ see chapter cleaning).

In case of disorders which cannot be traced back to foreign objects and cannot be eliminated by cleaning please contact our customer service.

Maintenance

The roller shutter does not require any specific maintenance.

Service/ Repair

	<p>Maintenance and Repair work may only be conducted by specialized staff of Schanz Rollladensysteme GmbH or authorized people. Use only original spare parts of Schanz Rollladensysteme GmbH. This is the only way to guarantee a secure and faultless function of the shutter-system. The warranty and liability of Schanz Rollladensysteme GmbH is not applicable in case of arbitrary repair works.</p>
---	---

The supply of spare parts does not enable to service or repair

11. Technical Data – Range

	Please note the enclosed documents of the component suppliers.
---	---

Environmental conditions	
Permissible ambient temperature for operation	+5°C to + 50 °C
Limited operation	-20°C to +5°C (see chapter 8 „Operation during winter and cold“
Permissible ambient temperature for storing	- 10 °C to + 30 °C
Permissible humidity	Max. 80 % Gear waterproof according to IP 44
Ambience	No aggressive air or air with high dust exposure For the use in areas close to the sea or under specific climate conditions please contact us The roller shutter is not being designed for the use in conflagrative or potentially explosive ambience
Power data	
Maximum allowable wind load* * The wind resistance class is dependent on the dimensions of the roller shutter	See table wind resistance classes
Resistance against snow load	None; vertical fitting
Operation power (hand wheel) – optional	Class 1; ≤ 30 N
Operation power (belt) – optional	Class 1; ≤ 90 N
Mechanical life cycle- optional	≥ Class 2; 7000 cycles
Corrosion resistance according to ISO 9227- optional	≥ Class 3
Noise emission (Distance 1m from the roller shutter)	Lp(A) ≤ 70 db(A)
Dimensions/ Weight	
Customized production	-
Connection Value Gear	
S-ABS Tubular drive	50/30 (20; 12; 8)
Turning moment	30 (20; 12; 8) Nm
Rotation speed	12 min ⁻¹
Type of current	1 phase alternating current
Voltage	220V / 50Hz
Current consumption	0,80 A
Capacity	184 W
Duty rating	Ca. 5 min.
Accuracy of end position	Class 2; ± 5 %
Warning! A parallel connection of the gear is not possible.	


12. Disposal

Dispose any no longer required roller shutters in an environmentally suitable manner considering the national regulations.

13. Product surveillance

Please inform us about any extraordinary problems or incidents within our product surveillance

14. CE- Conformity

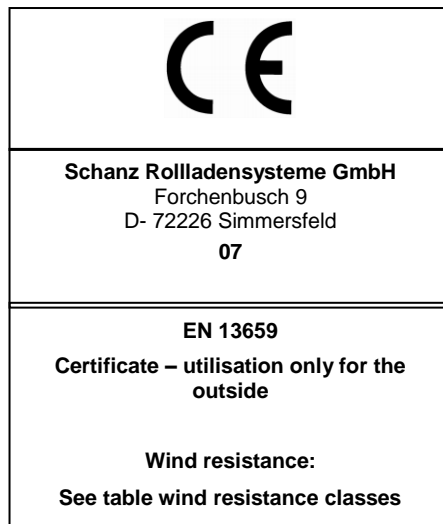

The CE-mark is inside the case of the roller shutter box.

15. Warranty

You obtain a warranty of 2 years for a roller shutter being delivered and assembled by Schanz Rollladensysteme GmbH.
 The warranty is given only for faulty material but also for all moving parts.

The warranty is not applicable in case of:

- Failure to follow the regulations and information given in this operating manual and the enclosed documents of the component suppliers
- Disregarding the specifications in the assembly instructions as far as the assembly has not been fulfilled by employees of Schanz Rollladensysteme GmbH or their authorised people
- In any case of improper usage
- Disregarding the capacity of the roller shutter (see chapter "Technical Data")
- Rebuilding the roller shutter or the control unit without authority
- Damage caused by clogged or blocked water drain holes
- Wilful damage
- Unprofessional interferences
- Violent operation of the roller shutter if it is frozen
- Unprofessional electrical connection
- Damage due to an act of God like storm, flood, lightning stroke, hail and fire

16. Customer Service/ Manufacturer

Our Customer Service department is here for you! You can reach us on weekdays under the following address:

Schanz Rollladensysteme GmbH
 Forchenbusch 9
 D- 72226 Simmersfeld
 Tel. Head Office +49 (0)7484/9291-0
 Tel. Customer Service +49 (0)7484/9291-12
 Fax: +49 (0)7484/9291-36
 Internet: www.rollladen.de

For any queries please state the commission-no. (See cover page)

17. Copyright/ References to this documentation

The copyright (copyright ©) for the present documentation is being kept by **Schanz Rollladensysteme GmbH** as well as partially by the suppliers of the sub vendor documentation.

The containing information is solely designed for the operating companies of our roller shutters. It may not be changed, extended, duplicated, saved on data linked institutions and spread without our written agreement nor should it be used for other purposes.

The containing information in this document makes no claim to be complete. We have done everything to reflect the content concerning our products to be correctly and up to date. However a warranty for the correctness of the documentation cannot be given. Especially photographs and other images can contain components which do not belong to the standard scope of delivery (options), or which have been changed in the meantime.

Changes in connection with a further development as well as the „state of technology“ are subject to alteration.

Copyright © Schanz Rollladensysteme GmbH, 2007

18. Included Documents

Please save the following documents which are provided together with the Operating Manual. They should be available for any customer service action.

Pos.	Document	Remark	Received
1	Operating Manual		
2	Operating Manual for operation elements/ control unit		
3	Connecting Diagram	Only for information – does not enable to connect the roller shutter	
4	Assembly Roller Shutter	Only for information – does not enable to assemble the roller shutters	

19. Table Wind Resistance Classes

Types S(U), GS(U), SI(U), SIG(U), R(U), SR(U)		Section width																																	
Slat	Guide Rail	500	600	700	800	900	1000	1100	1200	1300	1400	1500	1600	1700	1800	1900	2000	2100	2200	2300	2400	2500	2600												
Aluminium pattern	Studio Star (52 mm)	6																																	
		5000 5000 5000 5000 5000 5000 5000 2300 1800 1600 1500 1500 1400 2200 2200 2100 2000 2000 1900 1800 1700 1700																																	
		5																																	
		5000 3200 2300 2100 1900 1800 2600 2500 2500 2400 2300 2300 2200 2100 2100																																	
		4																																	
	5000 5000 3700 2700 2400 3200 3100 3000 2900 2800 2700 2700 2600 2500																																		
	3																																		
	5000 4800 4500 4300 4000 3800 3600 3500 3300 3200 3100 3000																																		
	6																																		
	5000 5000 5000 5000 5000 5000 2700 2100 1800 1700 1600 1500 2300 2300 2200 2100 2000 1900 1800 1800																																		
Aluminium pattern	Wiga Star (62 mm)	6																																	
		5000 5000 5000 5000 5000 5000 2700 2100 1800 1700 1600 1500 2300 2300 2200 2100 2000 1900 1800 1800																																	
		5																																	
		5000 2600 2200 2000 1900 2800 2600 2600 2500 2500 2500 2400 2300 2300																																	
		4																																	
	5000 5000 3000 2500 3400 3200 3100 3000 3000 2900 2800 2800 2700																																		
	3																																		
	4800 4500 4300 4000 3800 3600 3500 3300 3200 3100 3000																																		
	6																																		
	2700 2800 2900 3000 3100 3200 3300 3400 3500 3600 3700 3800 3900 4000 4100 4200 4300 4400 4500 4600 4700 4800 4900 5000																																		
Aluminium pattern	Studio Star (52 mm)	6																																	
		1800 1600 1600 1600 1500 1500 1500 1400 1400 1400 1400 1400 1400 1400 1600 1600 1500 1400 1400 1400 1400 1300 1300 1300																																	
		5																																	
		2000 2000 1900 1900 1900 1800 1800 1700 1700 1700 1600 1600 1600 1600 1900 1800 1800 1800 1700 1500 1500 1500 1500 1500																																	
		4																																	
	2500 2400 2400 2400 2300 2300 2200 2200 2100 2100 2000 2000 2000 2000																																		
	3																																		
	2900 2800 2700 2600 2500 2400 2300 2200 2100 2100 2000 2000 2000																																		
	6																																		
	1700 1700 1700 1700 1600 1600 1600 1500 1500 1500 1500 1500 1500 1500 1700 1700 1600 1500 1500 1500 1500 1400 1400 1400																																		
Aluminium pattern	Wiga Star (62 mm)	6																																	
		2200 2100 2100 2000 2000 1900 1900 1800 1800 1800 1700 1700 1600 1600 1900 1800 1800 1800 1700 1500 1500 1500 1500 1500																																	
		5																																	
		2700 2600 2600 2500 2500 2400 2300 2300 2200 2100 2100 2000 2000 1900																																	
		4																																	
	2900 2800 2700 2600																																		
	3																																		
	2900 2800 2700 2600																																		
	6																																		
	500 600 700 800 900 1000 1100 1200 1300 1400 1500 1600 1700 1800 1900 2000 2100 2200 2300 2400 2500 2600																																		
Aluminium pattern	Studio Star (52 mm)	6																																	
		5000 5000 5000 5000 5000 5000 2300 1800 1600 1500 1500 1400 1400 1400 1400 1400 1400 1400 1400 1400 1300 1300																																	
		5																																	
		5000 3200 2300 2100 1900 1800 1700 1600 1600 1500 1500 1500 1500 1500																																	
		4																																	
	5000 5000 3700 2700 2400 2200 2100 2000 1900 1800 1800 1800 1800																																		
	3																																		
	5000 5000 5000 3600 3100 2700 2500 2400 2300 2200 2200 2100																																		
	2																																		
	5000 5000 4100 3400 3200 2900 2800 2700 2600																																		
1																																			
5000 4700 4100 3700 3500 3200 3100																																			
0																																			
4500 4300 4100 4000 3800																																			
6																																			
2700 2800 2900 3000 3100 3200 3300 3400 3500 3600 3700 3800 3900 4000 4100 4200 4300 4400 4500																																			
Aluminium pattern	Studio Star (52 mm)	6																																	
		1300 1300 1300 1600 1500 1500 1500 1400 1400 1400 1400 1400 1400 1400 1500 1500 1400 1400 1400																																	
		5																																	
		1500 1500 1500 1900 1800 1800 1800 1700 1700 1700 1600 1600 1600 1600 1900 1900 1800 1800 1700																																	
		4																																	
	1700 1700 1700 2400 2300 2300 2200 2100 2100 2000 2000 2000 2000																																		
	3																																		
	2100 2100 2000 3000 2900 2800 2800 2700 2700 2600 2600 2500 2500 2500																																		
	2																																		
	2500 2400 2400 3300 3200 3100 3000 2900 2800 2700 2700 2600																																		
1																																			
3000 2800 2800																																			
0																																			
3700 3500 3400																																			
6																																			
500 600 700 800 900 1000 1100 1200 1300 1400 1500 1600 1700 1800 1900 2000 2100 2200 2300 2400 2500 2600																																			
Foam-filled	Studio Star (52 mm)	6																																	
		4000 4000 4000 4000 4000 4000 3500 3400 3300 3200 1500 1400 1400 1400 1400 1400 1400 1400 1400 1300 1300 1300																																	
		5																																	
		4000 4000 4000 4000 3800 3700 2200 2200 2200 2100 2100 2100 2000 2000 2000																																	
		4																																	
	4000 4000 4000 3900 3700 3500 3400 2400 2300 2300 2200																																		
	3																																		
	3200 3100 3000 2400																																		
	2																																		
	2800																																		
6																																			
2700 2800 2900 3000 3100 3200 3300 3400 3500																																			
Foam-filled	Studio Star (52 mm)	6																																	
		1300 1300 1300 1300 1700 1700 1700 1600 1600																																	
		5																																	
		1900 1900 1900 1800 2200 2200 2100 2100																																	
		4																																	
	2200 2200 2200 2100 2500 2500 2500 2400 2400																																		
	3																																		
	2400 2400 2400 2300 2800 2800 2800 2800 2800																																		
	2																																		
	2700 2600 2500 2500																																		
800 - 2200																																			
4																																			

EC Declaration of Conformity

According to the EC Machinery Directive 2006/42/EC, Annex II A

We herewith declare that the following product with its design and construction as well as the version introduced by us, is in compliance with the respective and fundamental safety and health requirements of the EC Machinery Directive.

This declaration loses its validity if the product is being changed without our agreement.


Description of the product	Roller Shutter Type Studio Star with electric gear drive
-----------------------------------	---

Applied EC Directive:

Directive/ Standard	Remark / Reference
2006/42/EC	EC Machinery Directive
89/106/EEC	Construction Material Directive
2004/108/EEC	EMC Directive

Applied harmonised standards, in particular:

DIN EN ISO 12100-2	Safety of Machines – Technical Guidelines
DIN EN 13659:2009	Legal Closings – Capacity and Safety requirements
DIN EN 60335-1:2007	Safety of household and similar electrical appliances – General requirements
DIN EN 60335-2-97:2007	Safety of household and similar electrical appliances - Particular requirements for drives for rolling shutters, awnings, blinds and similar equipment
DIN EN 55014-1:2007	EMC – Requirements for household and electrical appliances and similar electrical appliances Part 1: transient emissions
DIN EN 55014-2:2009	EMC – Requirements for household and electrical appliances and similar electrical appliances Part 2: interference resistance

Date	01.04.2010	Schanz Rollladensysteme GmbH Forchenbusch 9 D- 72226 Simmersfeld Tel. +49 (0)7484/ 9291-0 Fax: +49 (0)7484/ 9291-36
Signature		
Holger Schanz Managing Director	Rainer Schächinger Authorized Person for Documentation	