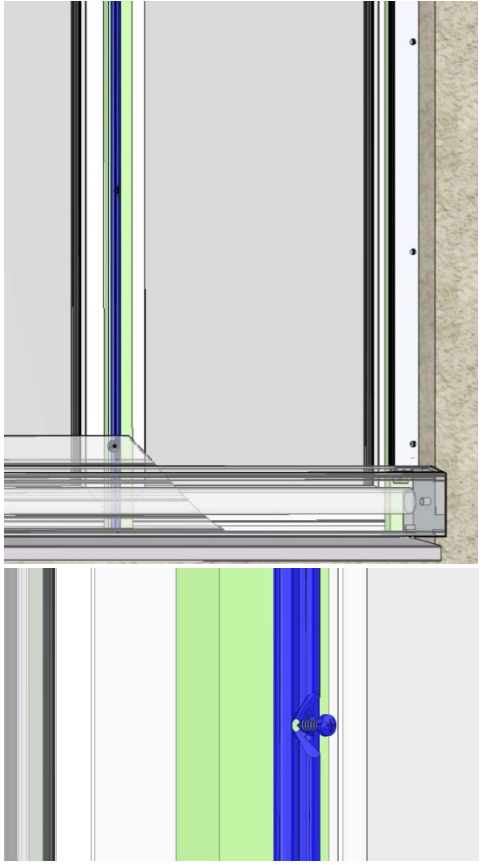
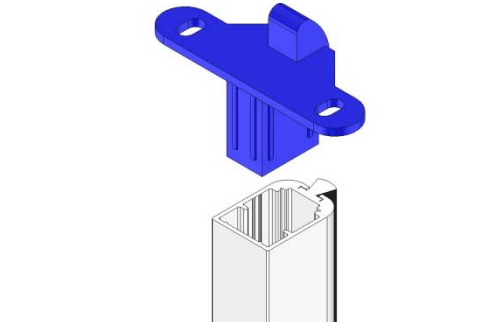
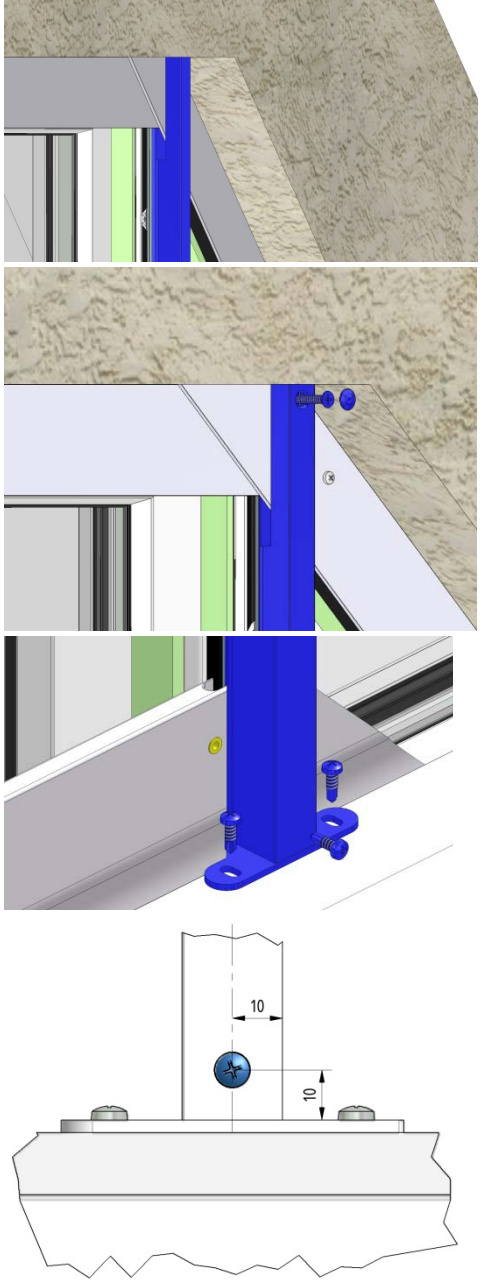


Alternative: Installation of guide base and stabilizer

Step No.	Operation	Note	Check
10	<p>Attach Guide base</p> <ul style="list-style-type: none"> - Push the guide base between roller shutter jacket and window frame (substructure) onto the bottom of the box and align it. - Screw the guide base with appropriate fixing material and according to the number of fixing holes on the guide rail to the window frame (optional: Subconstruction) 		
20	<p>Install the stabilizer</p> <ul style="list-style-type: none"> - Put the stabilizer foot into the stabilizer 		<ul style="list-style-type: none"> - Mind the correct position

Step No.	Operation	Note	Check
20	<ul style="list-style-type: none"> - Push the stabilizer with the intended slit on the bezels - Predrill a hole for the countersunk screw, lower it and then screw together the stabilizer with the bezels using an appropriate screw - Place the hole cap - Align the stabilizer and screw it with the provided drilling screws to the box - Screw together the stabilizer with the stabilizer foot. 		<ul style="list-style-type: none"> - Do not damage the cord - Mind the return pulley below the bezel - The end rail of the roller shutter jacket may not be clamped