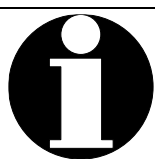
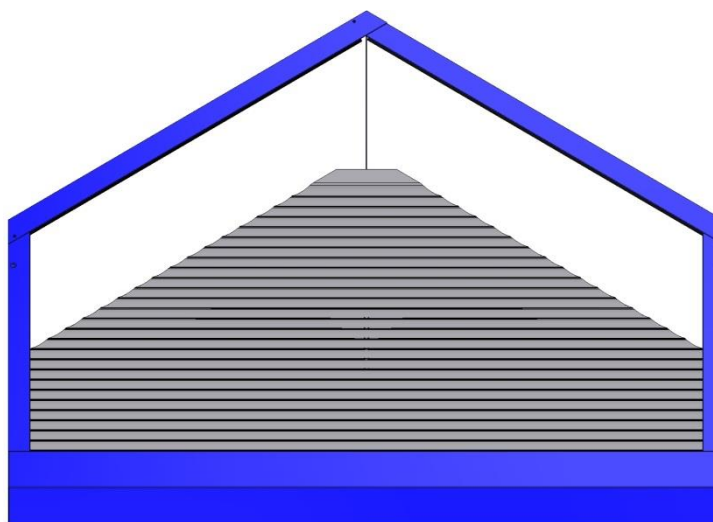


Assembly Instruction

Wiga Star Roller Shutter Type DSI - Motor Drive -



This assembly instruction contains important information on assembling roller shutters as well as important safety instructions.

The assembly operation may only be carried out by specialized staff of Schanz Rollladensysteme GmbH or technicians especially authorized by Schanz Rollladensysteme GmbH.

Schanz Rollladensysteme GmbH

Forchenbusch 9

D- 72226 Simmersfeld

Tel. +49 (0)7484/9291-0

Fax: +49 (0)7484/ 9291-36

E-Mail: info@schanz.de

Internet: www.schanz.com



Commission - No.	Date Installation and Instruction	Signature

Content

General Safety Information	2
Transport / Packaging / Unpacking.....	2
Assembling / Installation / Working on the facade.....	2
Assembly Drawing	2
Description of the basic procedure	5
Copyright/ References to this documentation	12

General Safety Information

This assembly instruction contains information for the correct installation of Schanz roller shutters. Due to the different types deviations may occur from this assembly instruction. However, this does not affect the security information.

Below described assembly steps may only be carried out by specialized staff of Schanz Rollladensysteme GmbH or technicians especially authorized by Schanz Rollladensysteme GmbH.

Adhere to the applicable regulations of the insurance association and take the necessary precautions for all work. Depending on accessibility, scaffoldings, ladders, fall protection devices, lifting devices and Personal Protective Equipment (e.g. safety helmet, safety boots etc.) is to be used.




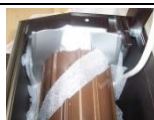
Transport / Packaging / Unpacking

Depending on the route of transport and the expected conditions the roller shutter will be packed and the roller shutter jacket will be fixed in the roller shutter box. Depending on the type and size of the roller shutters they might be so heavy that a suitable load-carrying equipment and lifting tool has to be utilized.

Only use sufficient dimensioned, safe and correctly fixated load-carrying equipment and lifting tools and avoid damages and injuries.


Check immediately if the product has been delivered without damage. Immediately complain about damaged roller shutters.

Removing the transportation safety devices:

Unscrew and open the cover of the roller shutter box	
Remove the foam sheets	
Remove entry mouth	
Remove the 4 slats which are connected to the jacket Put on the cover and screw it back.	


Assembling / Installation / Working on the facade

Each roller shutter is individually manufactured according to your window shape and size and must only be installed by Schanz Rollladensysteme GmbH or technicians especially authorized.

	The installation of the roller shutter has to be conducted following the information given in the assembly and safety instructions.
---	---

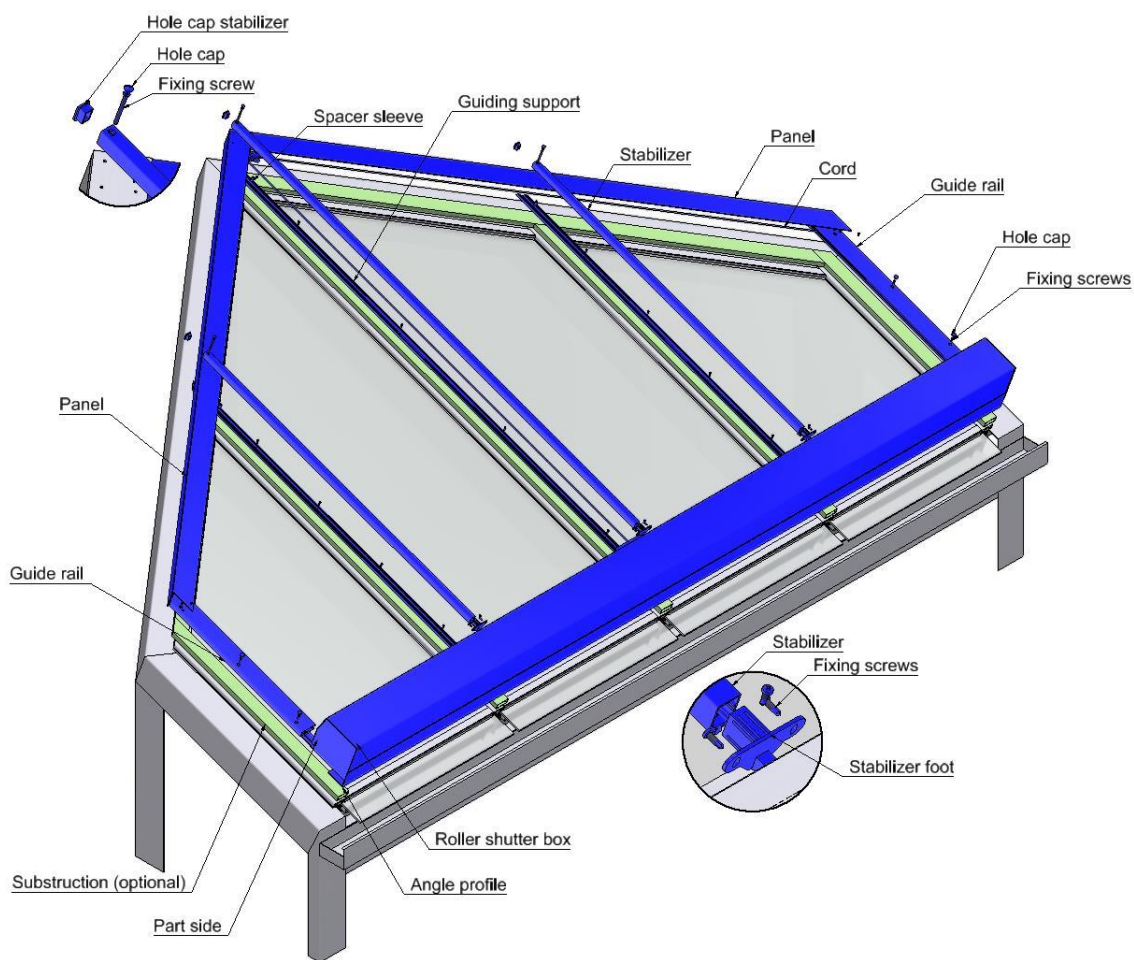
The installation of the roller shutters should only be conducted on ready-made rainproof facades!

The plastering of the roller shutters could lead to severe damages due to damp and furthermore make essential reparation difficult or even impossible.

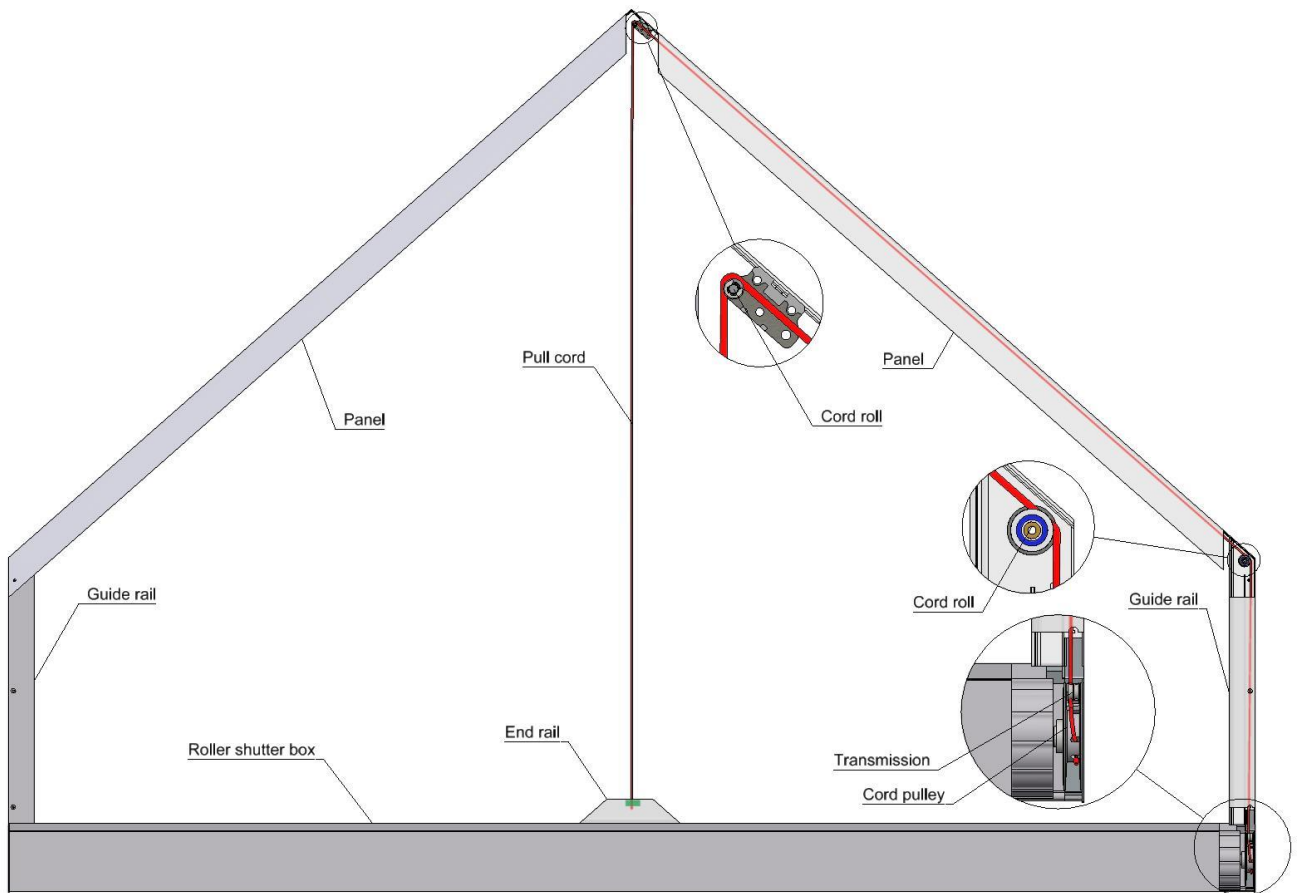
	The water drain holes on the bottom of the roller shutter box have to clear at all times so that ingressed water can drain off! Under no circumstances may the shutter box be buried in the wall or stucco.
---	--

The roller shutter has to be fixed sufficiently and safe attuned to the ground!

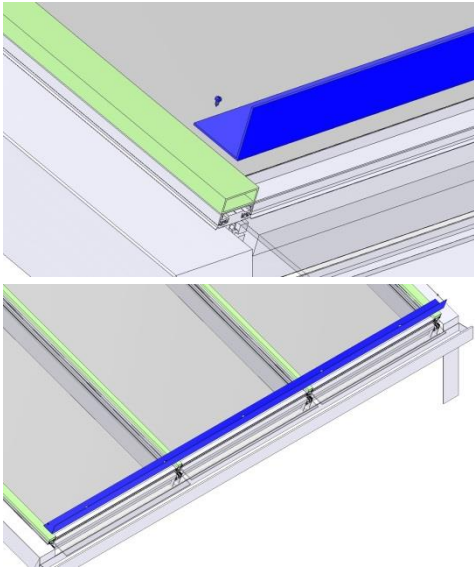
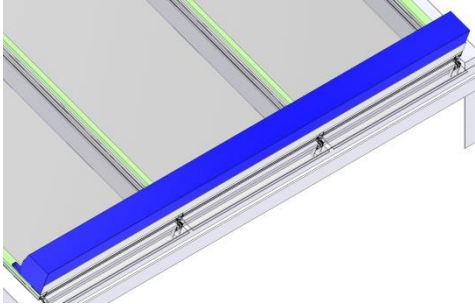
Assembly Drawing

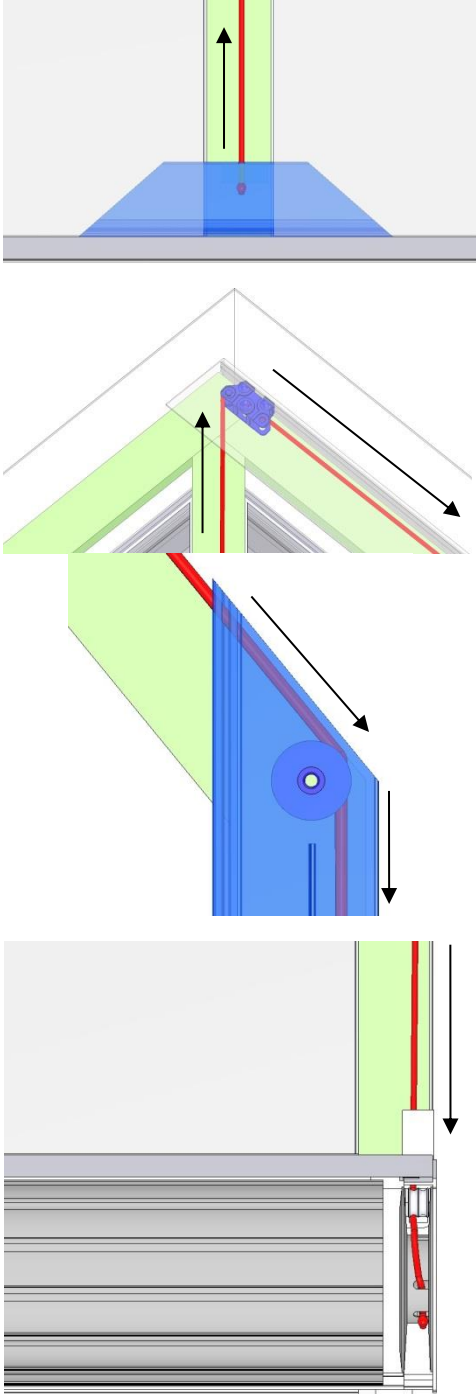
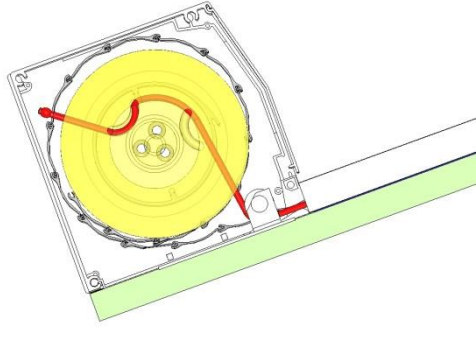


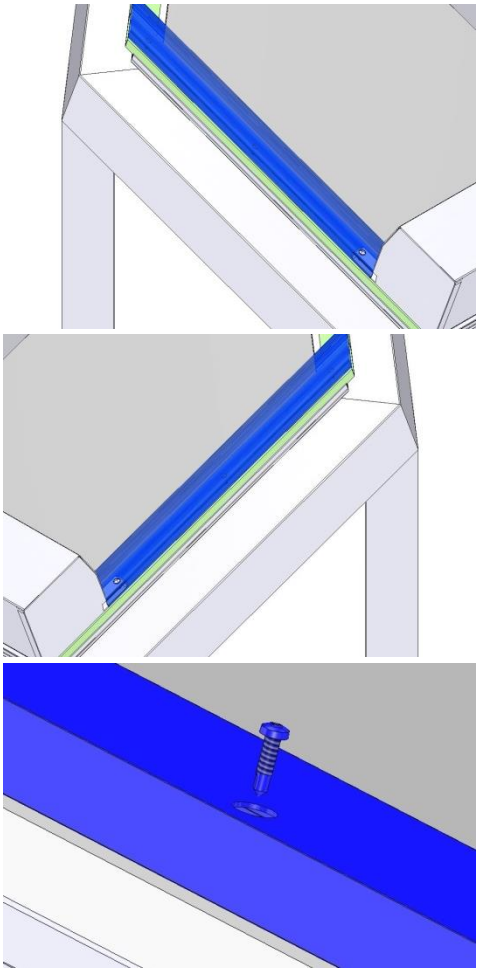
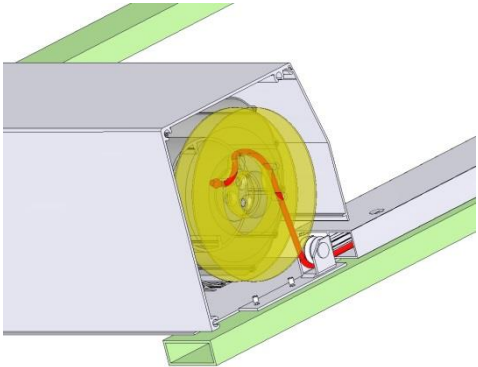
Cord Guidance



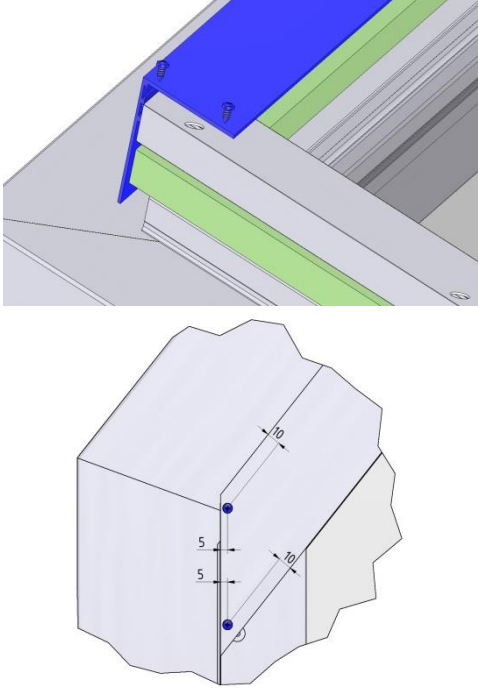

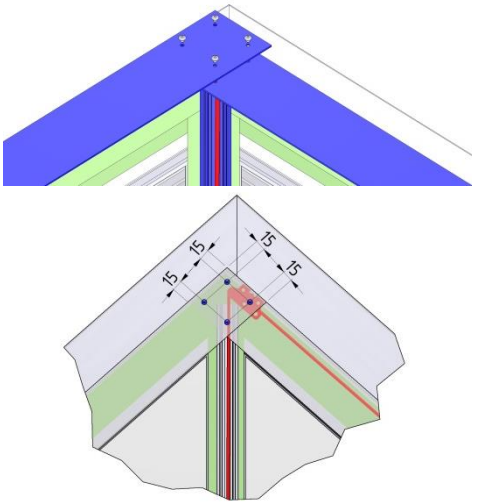
Description of the basic procedure

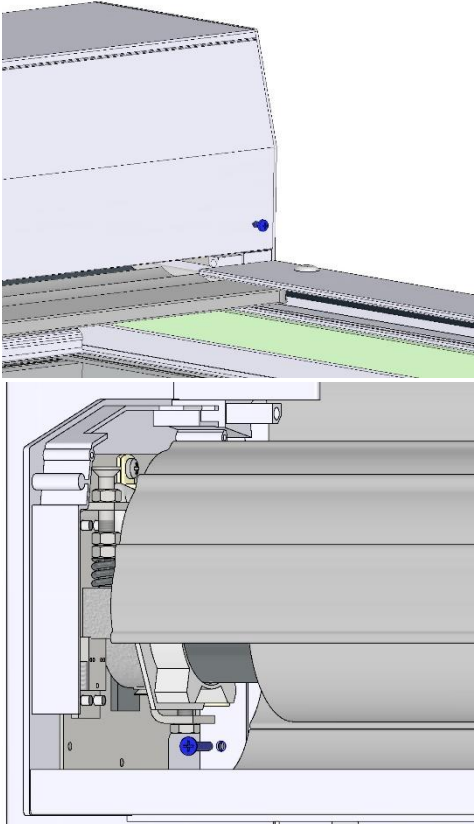
Step No.	Operation	Note	Check
	Check delivery for completeness		<ul style="list-style-type: none"> - Delivery is complete - Compare the goods with delivery note
00	Screw substructure to conservatory profile with appropriate fixing material Lay sealants at the drill holes between the conservatory frame and aluminium profile		<ul style="list-style-type: none"> - Mount at right angle
10	Mount the bracket at a right angle to the substructure.		<ul style="list-style-type: none"> - Mount at right angle
20	Align the roller shutter box - Put the roller shutter box onto the bracket		<ul style="list-style-type: none"> - Positioned at right angle - Support is necessary

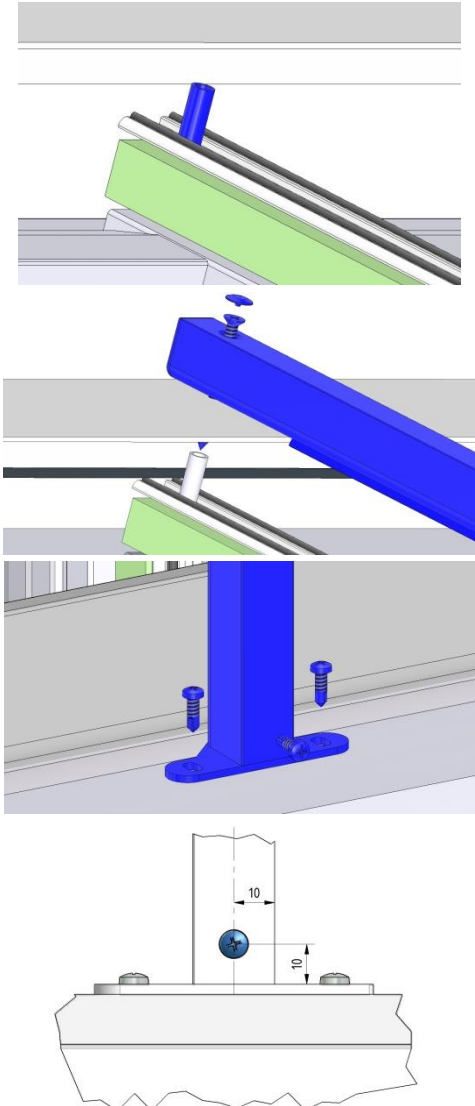
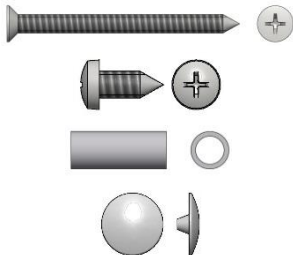
Step No.	Operation	Note	Check
30	<p>Pulling the cord through</p> <ul style="list-style-type: none"> - The cord is fixed in the end rail - Guide the cord over the the cord roll in the panel - Guide the cord through the guide rail over the cord roll and to the cord pulley 		
40	<p>Pre-assemble cord</p> <ul style="list-style-type: none"> - Put the cord through the foreseen drilling holes into the cord pulley - Pull the cord through completely and tie it together slightly to protect it from sliding back 		

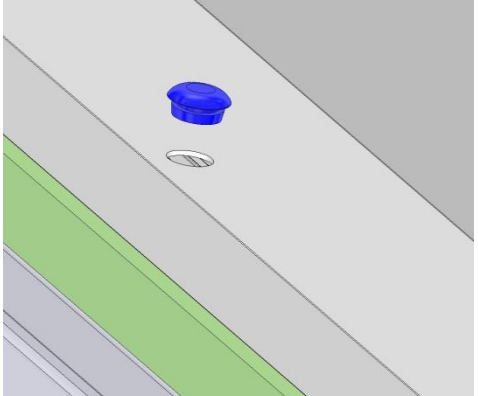
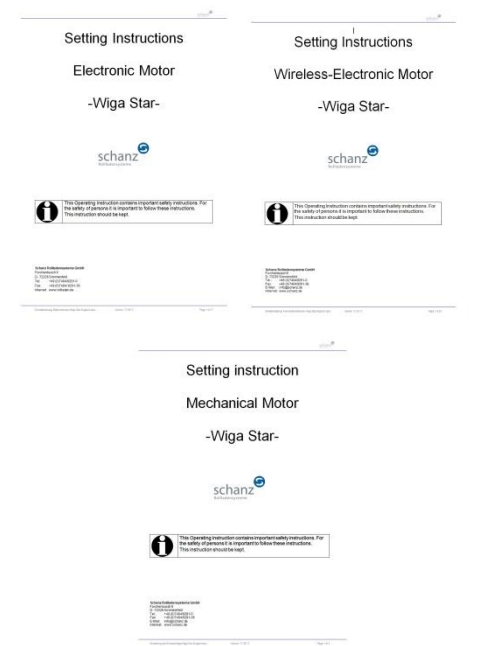
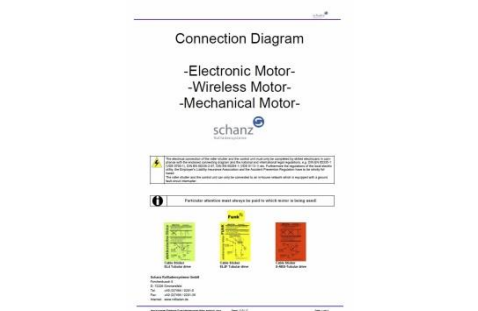
Step No.	Operation	Note	Check
50	<p>Attach guide rails</p> <ul style="list-style-type: none"> - Put the guide rails on the box Adjust the correct position with an angle <p>Screw the guide rails with appropriate fixing material to the aluminium profiles according to the number of fixing holes on the guide rails</p>		<ul style="list-style-type: none"> - Do not damage the cord - Mounted at right angle
60	<p>Attach cord</p> <ul style="list-style-type: none"> - Pull the cord completely tight and tie it together correctly - Cut off any overhanging cord and melt the ends with a cigarette lighter 		<ul style="list-style-type: none"> - Cord is attached

Step No.	Operation	Note	Check
70	<p>Attach the guiding support(s)</p> <ul style="list-style-type: none"> - Insert the guiding support(s) between roller shutter jacket and the back panel until the bottom of the box and align it - Screw the guiding support(s) with appropriate fixing material to the aluminium profiles according to the number of fixing holes on the guiding support(s) 		
	<p>For attaching the guiding support(s) it is recommended to use the special tapping screw 3.5 x 9.5</p>		
80	<p>Attach the panels</p> <ul style="list-style-type: none"> - Guide the cord over the cord roll, put on the panel and adjust it - If applicable correct the position of the cord roll (loosen the pin before and tighten it back afterwards) - Pre-drill a hole for the countersunk screw, countersink it and screw together the panel through the cord roll with the aluminium profile with an appropriate screw - Put on the panel, adjust it and screw it with two short tapping screws to the guide rail 		<ul style="list-style-type: none"> - Position of the cord is exactly vertical - Do not damage the cord - Mind the cord roll under the panel

Step No.	Operation	Note	Check
80	<ul style="list-style-type: none"> - Put on panel (without cord roll), adjust it and screw it with two short tapping screws to the guide rail 		
	<p>For attaching the panel the screw ISO 7049 – A2 3,9 x 9,5 is needed</p> <p><u>Note:</u> Always pre-drill the holes</p>		
90	<p>Rivet the panels</p> <ul style="list-style-type: none"> - Adjust the panels, drill holes and fix it with rivets 		<ul style="list-style-type: none"> - Do not damage the cord - Mind the cord roll under the panel

Arbeitsgang Nr.	Arbeitsvorgang	Bemerkungen	Prüfungen
100	<p>Attach Roller shutter box</p> <ul style="list-style-type: none"> - Unscrew the screws of the box lid and open the roller shutter box <ul style="list-style-type: none"> - Screw the roller shutter box on the left and the right side through the side part and back panel with appropriate fixing material with the substructure. <p>To prevent the box from twisting due to the forces acting, it must be fastened.</p>	 <p>The 'Bemerkungen' column contains two technical drawings. The top drawing is a perspective view of the roller shutter box lid being removed from the main box. The bottom drawing is a cross-sectional view showing the roller shutter box being mounted onto a substructure. A blue screw is highlighted in both drawings to indicate the fastening point.</p>	

Step No.	Operation	Note	Check
110	<p><u>Note:</u> It is recommended to conduct the following operation after the setting of the roller shutter</p> <p>Attach the stabilizer(s)</p> <ul style="list-style-type: none"> - A spacer sleeve is being added between guiding support and panel - Pre-drill a hole for the countersunk screw through the panel in the aluminium profile, countersink it and screw together the stabilizer with the panel and through the spacer sleeve with an appropriate screw. - Put on hole caps - Align the stabilizer and fix it with the foreseen drilling screws to the box cover - Screw stabilizer with stabilizer foot together <p><u>Note:</u> For fixing of the stabilizer foot short screws are being needed</p>		<ul style="list-style-type: none"> - Do not damage the cord - Mind the redirection part under the panel - The end rail of the roller shutter jacket must not be stuck
	<ul style="list-style-type: none"> - Chipboard screw countersunk head 4,5 x 70 for stabilizer on panel - ISO 7049-3,9 x 9,5 for stabilizer foot - Spacer Sleeve - Hole Cap 		

Step No.	Operation	Note	Check
120	Completion of the installation - Place the hole caps according to the amount of fixing holes on the guide rails		
	Setting the roller shutter according to the Operating Instructions "Electronic Motor", "Wireless Electronic Motor" or "Mechanical Motor" <u>Default delivery status</u> (Drive with electric motor) <ul style="list-style-type: none"> - The system is preloaded - The motor is in learning mode 		Final inspection: <ul style="list-style-type: none"> - Roller Shutter is accurately tight and hole caps are available - Water drain holes are clear - Roller shutter is working - Instruction took place - Documentation handed over
	Connect the roller shutter according to the instruction „Connection Diagram“		

Copyright/ References to this documentation

The copyright (copyright ©) for the present documentation is being kept by **Schanz Rollladensysteme GmbH** as well as partially by the suppliers of the sub vendor documentation.

The containing information is solely designed for the operating companies of our roller shutters. It may not be changed, extended, duplicated, saved on data linked institutions and spread without our written agreement nor should it be used for other purposes. The containing information in this document makes no claim to be complete. We have done everything to reflect the content concerning our products to be correctly and up to date. However a warranty for the correctness of the documentation cannot be given. Especially photographs and other images can contain components which do not belong to the standard scope of delivery (options), or which have been changed in the meantime. Changes in connection with a further development as well as the „state of technology“ are subject to alteration. Copyright © Schanz Rollladensysteme GmbH, 2023